## Tactical 4x4 Notes for D2 Spare Tire Carrier Install When Not Purchased With Bumper

On # 5 of instructions, the hole closest to the tail light opening will end up being the mount for the inner tail light housing, as well as one of the pivot bracket mounts.

Therefore, you need to remove the passenger tail light housing to prevent damage while drilling.

The mount bolt will go through the inner tail light housing mount bracket. Use the supplied washers to space the tail light bracket from the bumper so that proper tightening can be achieved. Without the washers as spacers the tail light housing bracket may separate from the tail light housing.

Questions or comments? Contact the Tactical Rovers Install Team: eric@tacticalrovers.com (951) 239-6236